


## Typical Edge Detail For EPDM Pour-N-Place

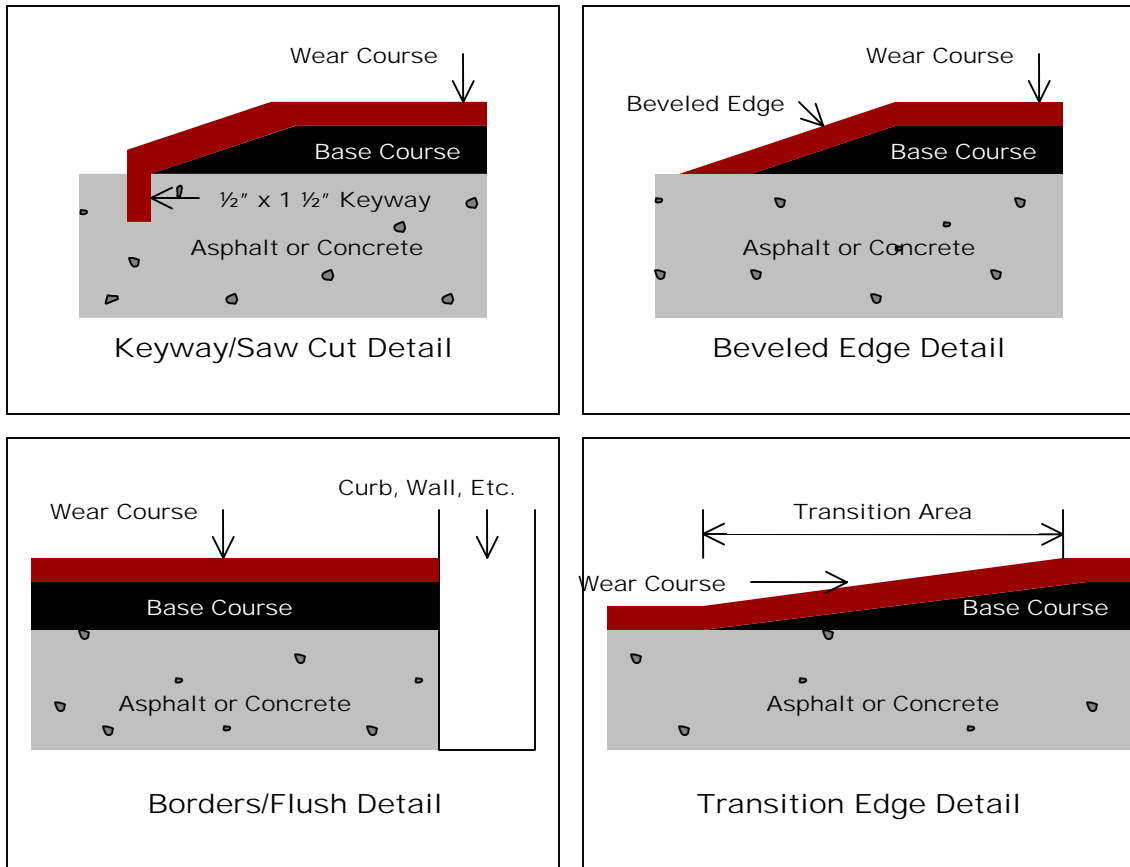

## Concrete/Asphalt Base Requirements

1. Depth: Concrete @ 4 inches thick and Asphalt @ 2 inches thick
2. Curing: The curing time for concrete and asphalt is 7 to 14 days. A curing agent must not be used to accelerate the curing of concrete.
3. Slope: Base should slope  $\frac{1}{4}''$  per foot and exhibit positive drainage.
4. Drains: Drains should be located at low end of concrete or asphalt base.
5. Finish: Concrete should be broom finished.